

USER'S MANUAL

Please read the user's manual carefully.

**Targus™****UNIVERSAL**
Sony
rapid battery charger

79 mm

Product Spec:**A. Charger Base:**Input voltage: DC 12V-24V
Output voltage: 4.2VDC or 8.4 VDC
Charge current: 800mA Max.
Size: 156x60x25 mm
Weight: 100g**B. Switching Power Adapter:**Input voltage: AC 105-240V
Output voltage: DC 14V/800mA Max.
C. Car Charger:
Input voltage: 12V-24 VDC
Output voltage: 12V-24 VDC

① Travel Charger ② Car-Charge

**Feature:**

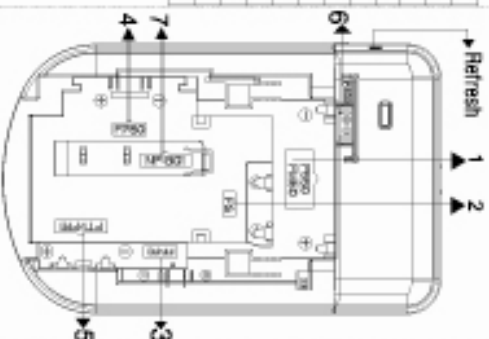
- Charge up to 11 types of Sony camera/lens digital camera's batteries (see the manual for details).
- Universal: about 4.2V or 8.4V Li-ion rechargeable systems.
- Over voltage built-in shut down protection, constant voltage charge mode.
- Universal: charge input AC 100-240V and DC 12-24V.
- Switching power supply adapter and DC car cord, which allows you to charge your battery in-car or in the car.
- LED indicator lamp to green light and red light charge your battery when fully charge.

Charger Type	Charger Input	Output
Travel Charger	1000mA	Approx. 200mA
Car Charger	Approx. 1200mA	Approx. 200mA
	Approx. 200mA	Approx. 1000mA
	Approx. 300mA	Approx. 220mA

Output	Type	Voltage	Compatible model number
1	L	7.2V	Sony: SR-100L, SR-100L, SR-100
1	M	7.2V	Sony: SR-100M, SR-100M, SR-100M
2	S	8.4V	Sony: SR-100S, SR-100S, SR-100S
3	F	7.2V	Sony: SR-100F, SR-100F
3	C	8.0V	Sony: SR-100C, SR-100C
4	P	7.2V	Sony: SR-100P, SR-100P
4	T	8.8V	Sony: SR-100T
5	R	8.8V	Sony: SR-100R
6	E	3.6V	Sony: SR-100E
6	A	7.2V	Sony: SR-100A
7	G	3.6V	Sony: SR-100G

Charging Procedure:**Please follow the steps below to charge your battery.**

1. Connect the battery into the charge chamber.
2. Plug the AC adapter into the connector of the charger.
3. Insert the charger plug into the AC outlet and watch charging LED/LIGHT light on.
4. When charging is done, the LED indicator will turn to green.

**Refresh**

Use battery's refresh key to let the charge or use other people about use it to help you. The refresh button helps battery to use to charge and get back to normal. Use just the battery refresh key. Don't use the battery on the second charged time. The use refresh the battery key to refresh or let other charge it use use.

Caution

1. The battery charger is for indoor use only, do not expose to use of water.
2. The plug should be disconnected from the main when the charging process is completed or when the charger is not in use.
3. Children should only use the charger under adult supervision.
4. Use the correct AC/DC connector cable, never use any other connector.
5. Charge only with 1.1 Ah battery only.
6. Please refer to back or the rear side of the battery charger.
7. Do not store in high temperature.
8. Do not drop or put a heavy load on the product.
9. Do not use in areas under direct sunlight, near flammable equipment, or in other high temperature areas.

TG-LCS

全機型対応充電器
全機型対応充電器

SONY (L) 系列



SONY (M) 系列



SONY (S) 系列



SONY (F) 系列



SONY (C) 系列



SONY (P) 系列



SONY (T) 系列



SONY (R) 系列



SONY (A) 系列



SONY (E) 系列



SONY (NP-Q01) 系列

