

User Guide

1. There are four plastic adapters in the case:
Adapter 1 for Compact Flash and Memory stick,
Adapter 2 for SD, Memory Stick Duo and XD
Adapter 3 for mini SD
Adapter 4 for micro SD and M2
2. For storing Compact Flash and Memory stick, please remove Adapter 2, 3, 4 and slide the CD in Adapter 1 or put Memory Stick in Adapter 1 as Figure 1 and 2
3. For storing SD, Memory stick Duo and XD, please remove Adapter 3 and 4 and put the memory card in Adapter 2 as figure 3
4. For storing Mini SD, please remove Adapter 4 put the memory card in Adapter 3 as figure 4
5. For storing Micro SD and M2, please the memory card in Adapter 4 as figure 5

